

Maintenance of your roofvents.

Your thermally broken aluminium or PVCu hybrid roofvents are manufactured in such a way as to be largely maintenance free.

That is to say there are no maintenance routines that need to be undertaken by the end user.

All that needs to be done is basic cleaning .. Periodically wipe all surfaces to prevent a build up of dirt which may in time degrade the surface finish of the product, externally keep moss and leaves from building up and potentially causing damage and water ingress.

Never use solvents or abrasives in the cleaning process as this will damage the surface finish of the roofvents.

There are no items that need to be oiled or greased under normal working conditions.

Never tamper with any electrical component and never oil or grease any moving part of any motor .. Never put oil or grease on moving parts, they act as a dust and dirt trap and may cause problems at a later date which will void any guarantee.

Do not be tempted to put oil or grease on the chain that extends from your motors, this may cause internal motor damage and will be an unsightly dirt trap in a very short time .. This action will also void your guarantee.

Periodically check that all screws and bolts/nuts etc have not worked loose, there is no need to try to tighten anything just a visual check is good enough as a precaution against pending problems.